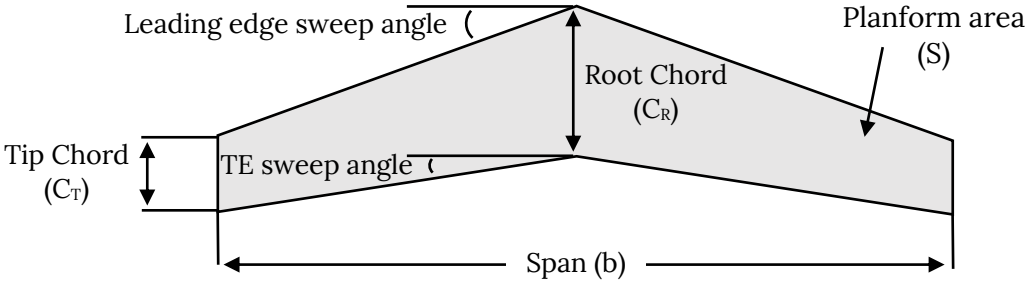
Leading edge sweep angle (
Planform area
(S)
Root Chord
(C_R)
Tip Chord
(C_T)
TE sweep angle (
Span (b)